


controls faceplate front side “ERUPTION”

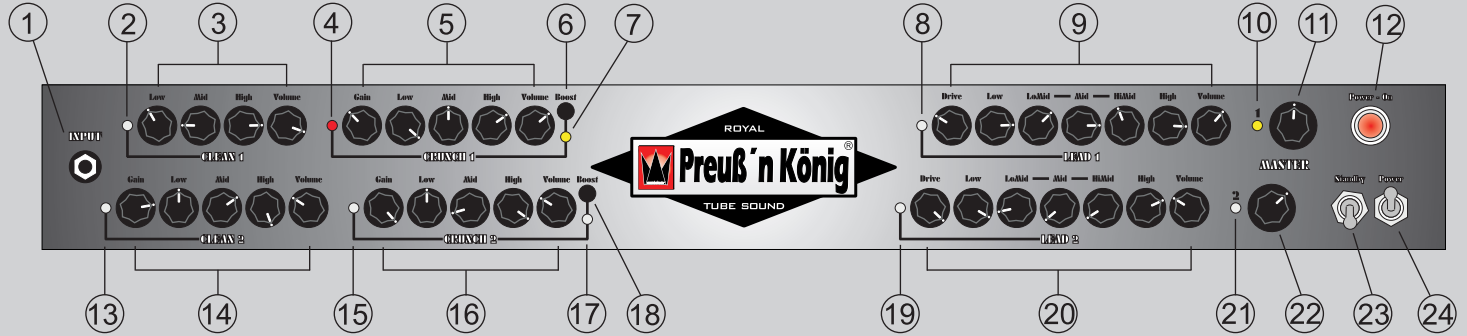

① input jack for guitar (active / passive)

② pilot light for “Clean 1” channel

③ volume- and EQ-control for “Clean 1” channel

④ pilot light for “Crunch 1” channel

⑤ gain-, volume- and EQ-control for “Crunch 1”

⑥ push switch for “Boost” function “Crunch 1”

⑦ pilot light for “Boost” function (Crunch 1)

⑧ pilot light for “Lead 1” channel

⑨ drive-, volume- and EQ-control for “Lead 1”

⑩ pilot light for “Master 1”-control

⑪ “Master 1”-control for total volume of the amp

⑫ pilot-lamp - status indicator of the amp

⑬ pilot light for “Clean 2” channel

⑭ gain-, volume- and EQ-control for “Clean 2”

⑮ pilot light for “Crunch 2” channel

⑯ gain-, volumen- and EQ-control for “Crunch 2”

⑰ pilot light for “Boost” function (Crunch 2)

⑱ push switch for “Boost” function “Crunch 2”

⑲ pilot light for “Lead 2” channel

⑳ drive-, volume- and EQ-control for “Lead 2”

㉑ pilot light for “Master 2”-control

㉒ “Master 2”-control for second total volume of the amp

㉓ standby - switch of amplifier

㉔ power - switch for turn on the amplifier