


controls faceplate rear side “ERUPTION”

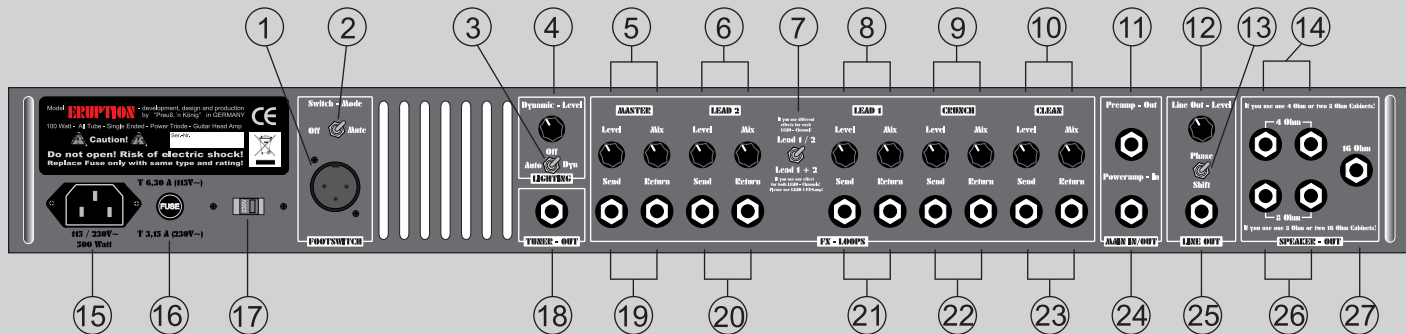

① XLR out for connection of a foot pedal

② switch for switching mode - mute / off

③ selector for light effects

④ control potentiometer for dynamic light

⑤ level- and mix-control for “Master-FX” loop

⑥ level- and mix-control for “Lead 2-FX” loop

⑦ selector for allocating external devices on “Lead 1 / Lead 2” -channels

⑧ level- and mix-control for “Lead 1-FX” loop

⑨ level- and mix-control for “Crunch-FX” loop

⑩ level- and mix-control for “Clean-FX” loop

⑪ preamp out to drive additional power amps

⑫ line out control potentiometer

⑬ phase shift for line out signal

⑭ speaker out for 1x4 ohm or 2x8 ohm-cabinets

⑮ AC power connector

⑯ main fuse of the amplifier

⑰ Voltage selector switch 230 / 115 Volt

⑱ tuner out for connection of a tuner

⑲ send- and return-jacks for “Master-FX” loop

⑳ send- and return-jacks for “Lead 2-FX” loop

㉑ send- and return-jacks for “Lead 1-FX” loop

㉒ send- and return-jacks for “Crunch 1/2-FX” loop

㉓ send- and return-jacks for “Clean 1/2-FX” loop

㉔ poweramp-in for connecting external preamps

㉕ line out-jack for connecting mixer for example

㉖ speaker out for 1x8 ohm or 2x16 ohm-cabinets

㉗ speaker out for 1x16 ohm-cabinet